

Fig. 1

96

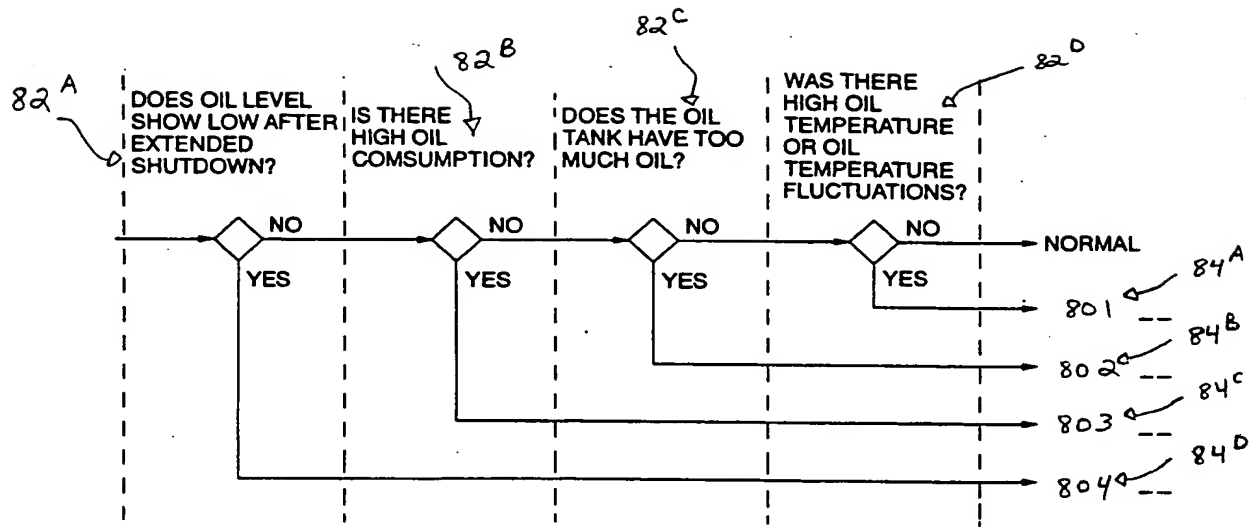


Fig. 2A

## LUBRICATION SYSTEM - FAULT CODE INDEX

FAULT CODE	1. LOG BOOK ENTRY 2. FAULT ISOLATION REFERENCE
701	1. Oil does not flow from Replenishing Tank to Engine Tank when Selector Valve is set to LH(RH). 2. <u>Page 101</u> Block 1.
702	1. PRESS TO TEST Switch does not operate. 2. <u>Page 103</u> Block 1.
703	1. When oil is added to Engine Oil Tanks, Oil FULL indication does not operate. 2. Figure 102 Block 1.
801	1. High Engine oil temperature or oil temperature fluctuations were shown. 2. Figure 101 Block 1.
802	1. The Engine Oil Tank has too much oil. 2. Figure 101 Block 1.
803	1. There was high Engine oil consumption. 2. <u>Figure 101</u> Block 1.
804	1. shutdown. Engine oil level shows low after extended 2. Figure 101 Block 1.

Fig. 2 B

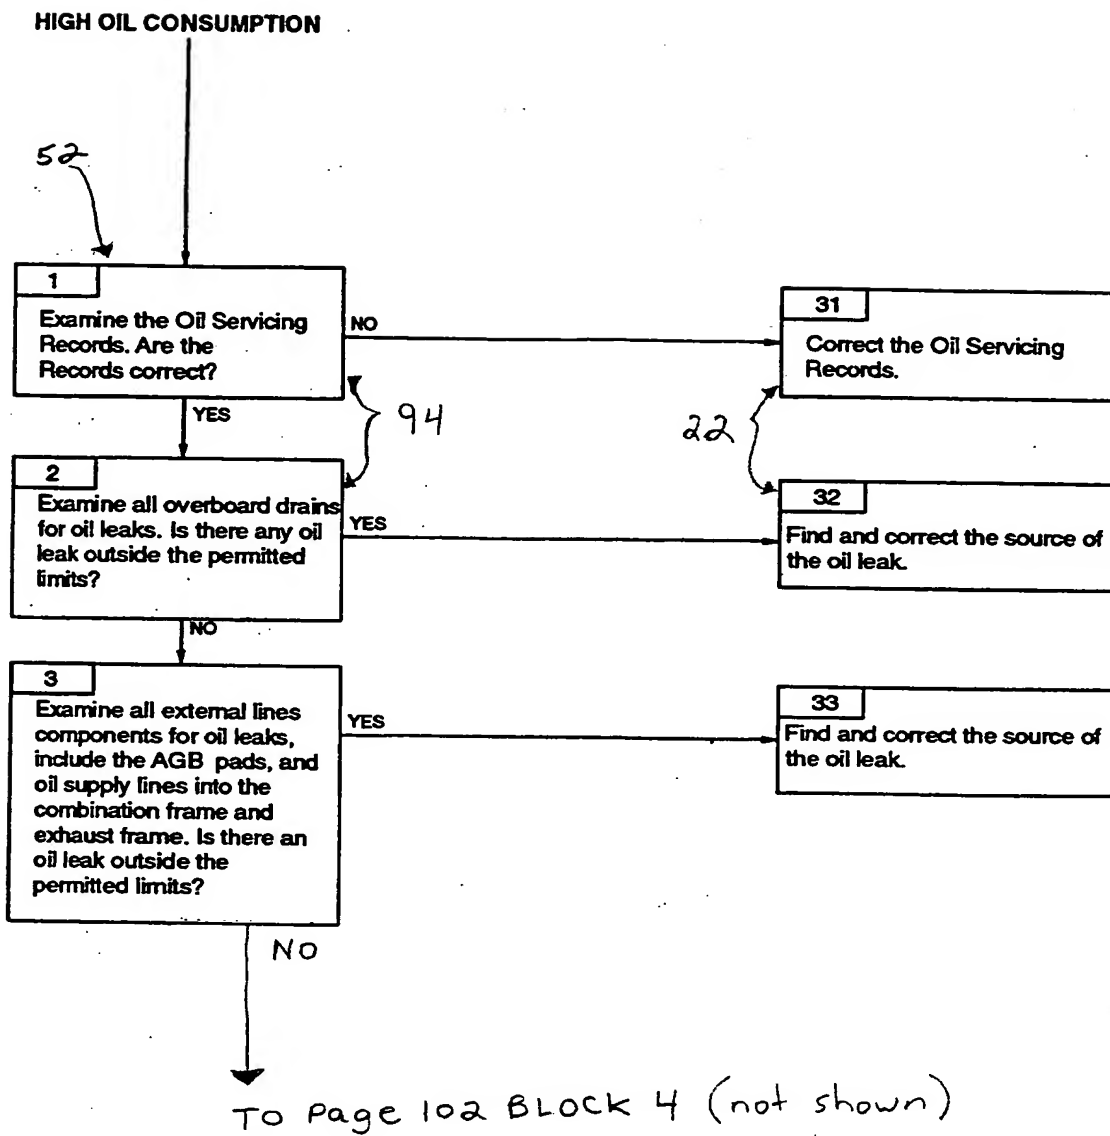


Fig. 2C

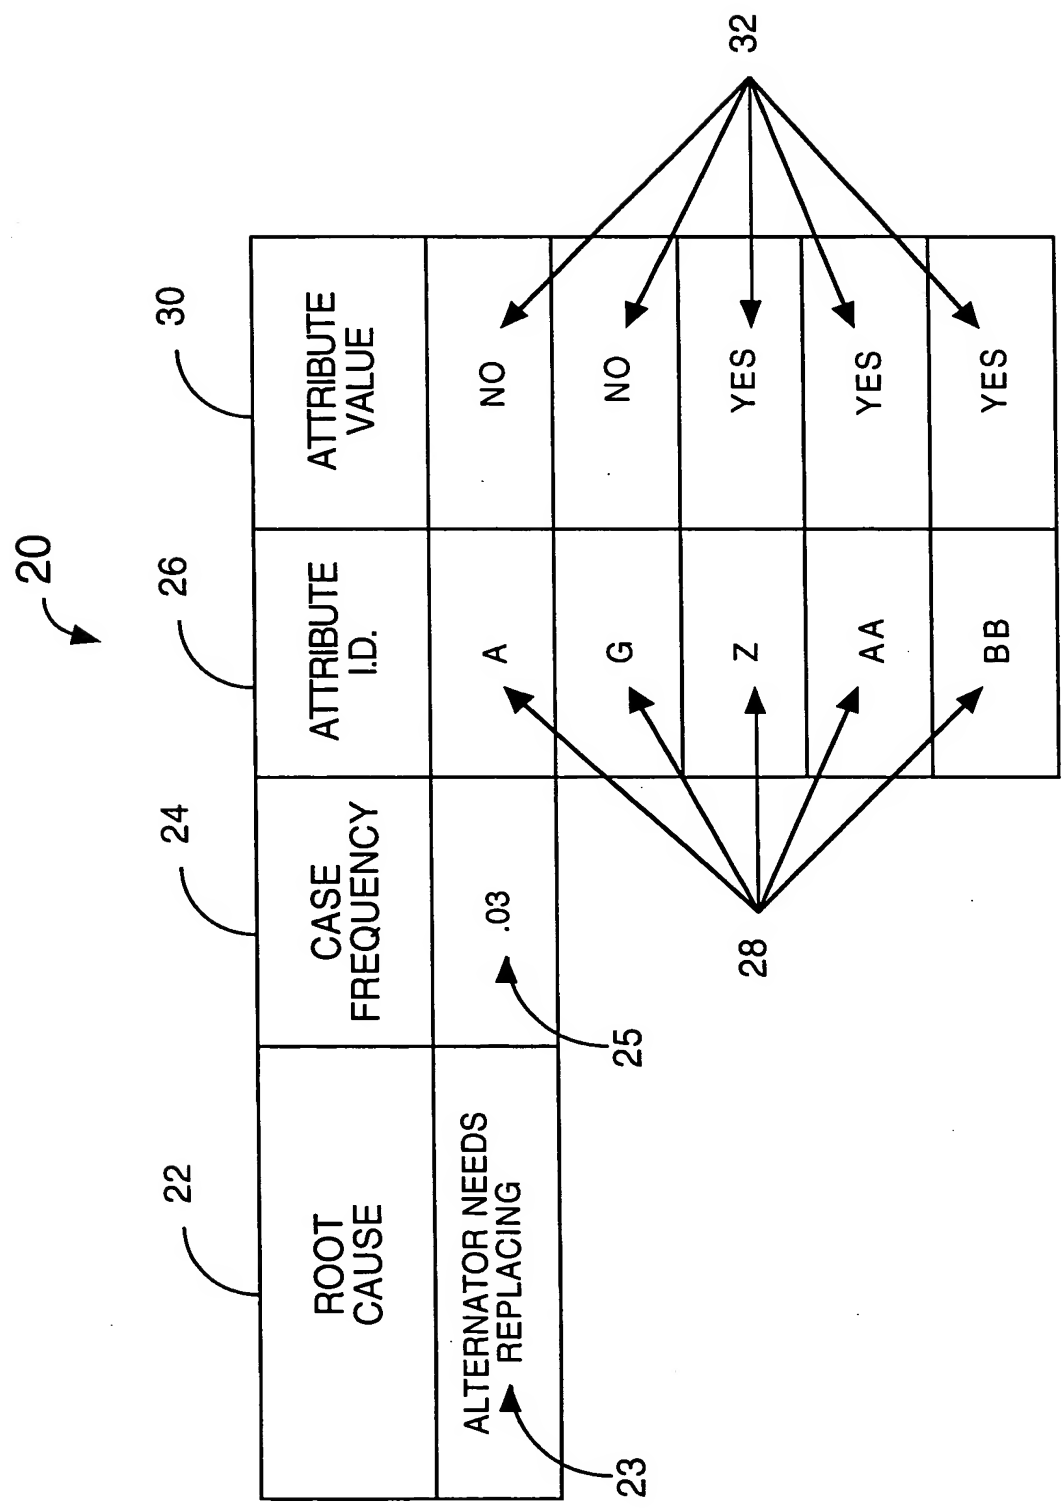


Fig. 3A

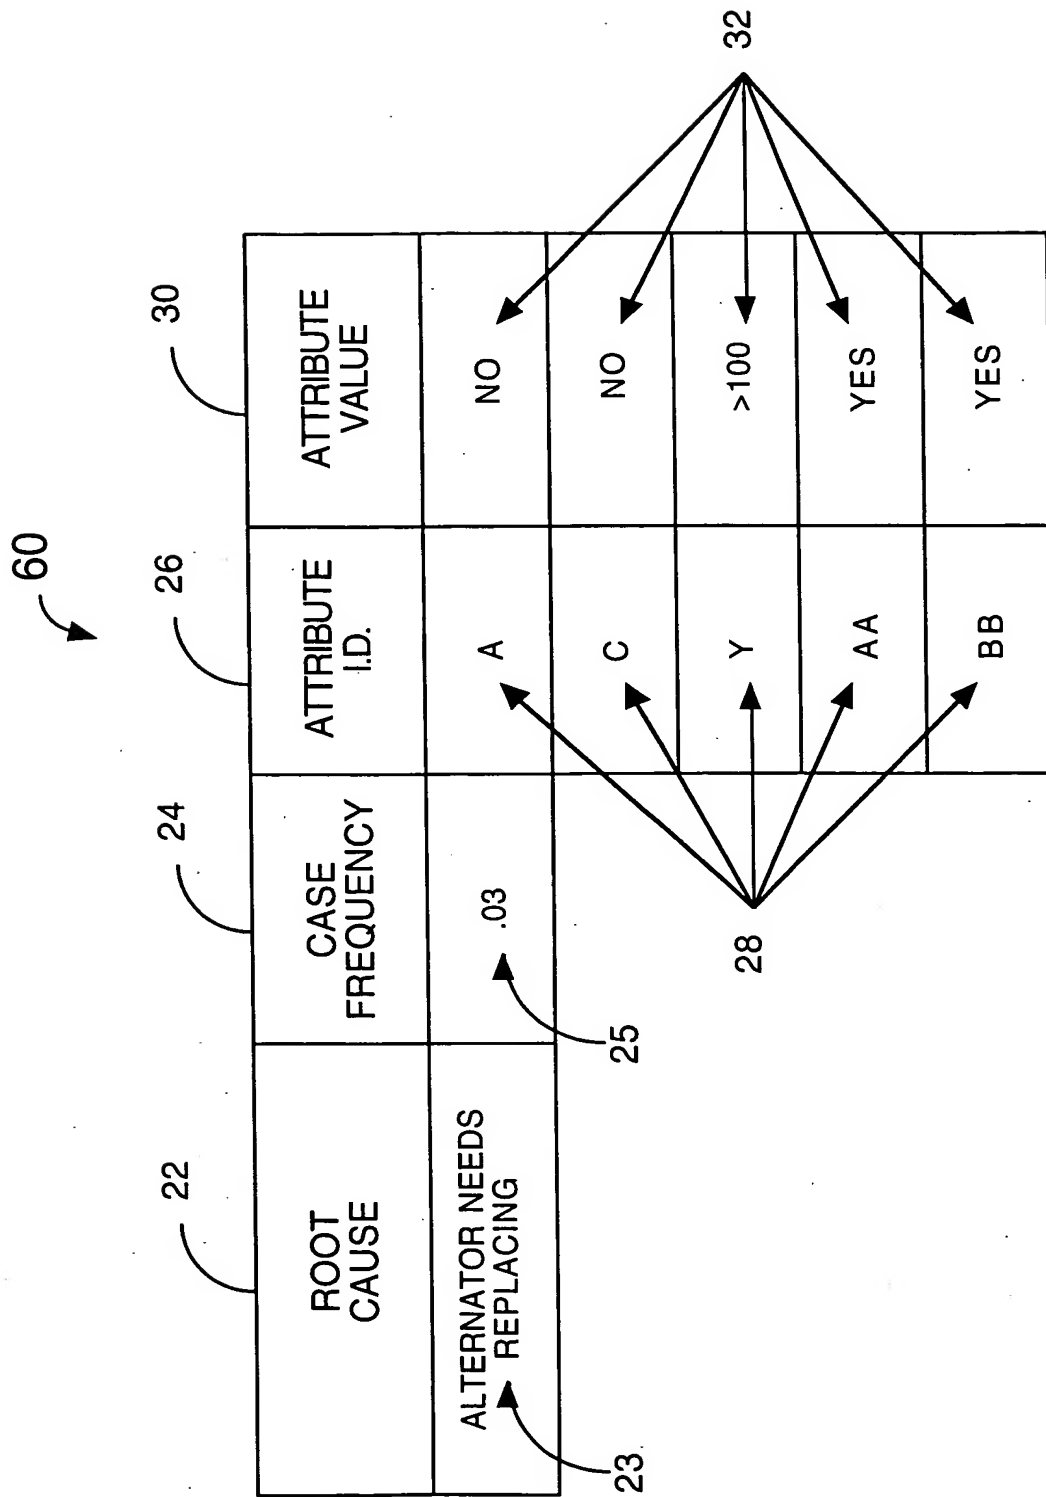


Fig. 3B

19

40

36

34

ATTRIBUTE I.D.	QUESTION	ATTRIBUTE TYPE
A	WILL ENGINE START?	BOOLEAN
B	ARE BRAKES FUNCTIONING?	BOOLEAN
C	IS FAULT INDICATOR #17 ACTIVATED?	BOOLEAN
D	IS TANK FULL OF GAS?	BOOLEAN
...	...	...
Y	WHAT IS ENGINE TEMP.?	NUMBER
Z	IS BATTERY DEAD?	BOOLEAN
AA	CAN BATTERY STORE A CHARGE?	BOOLEAN
BB	ARE TERMINALS PROPERLY CONNECTED?	BOOLEAN

42

38

Fig. 4

28

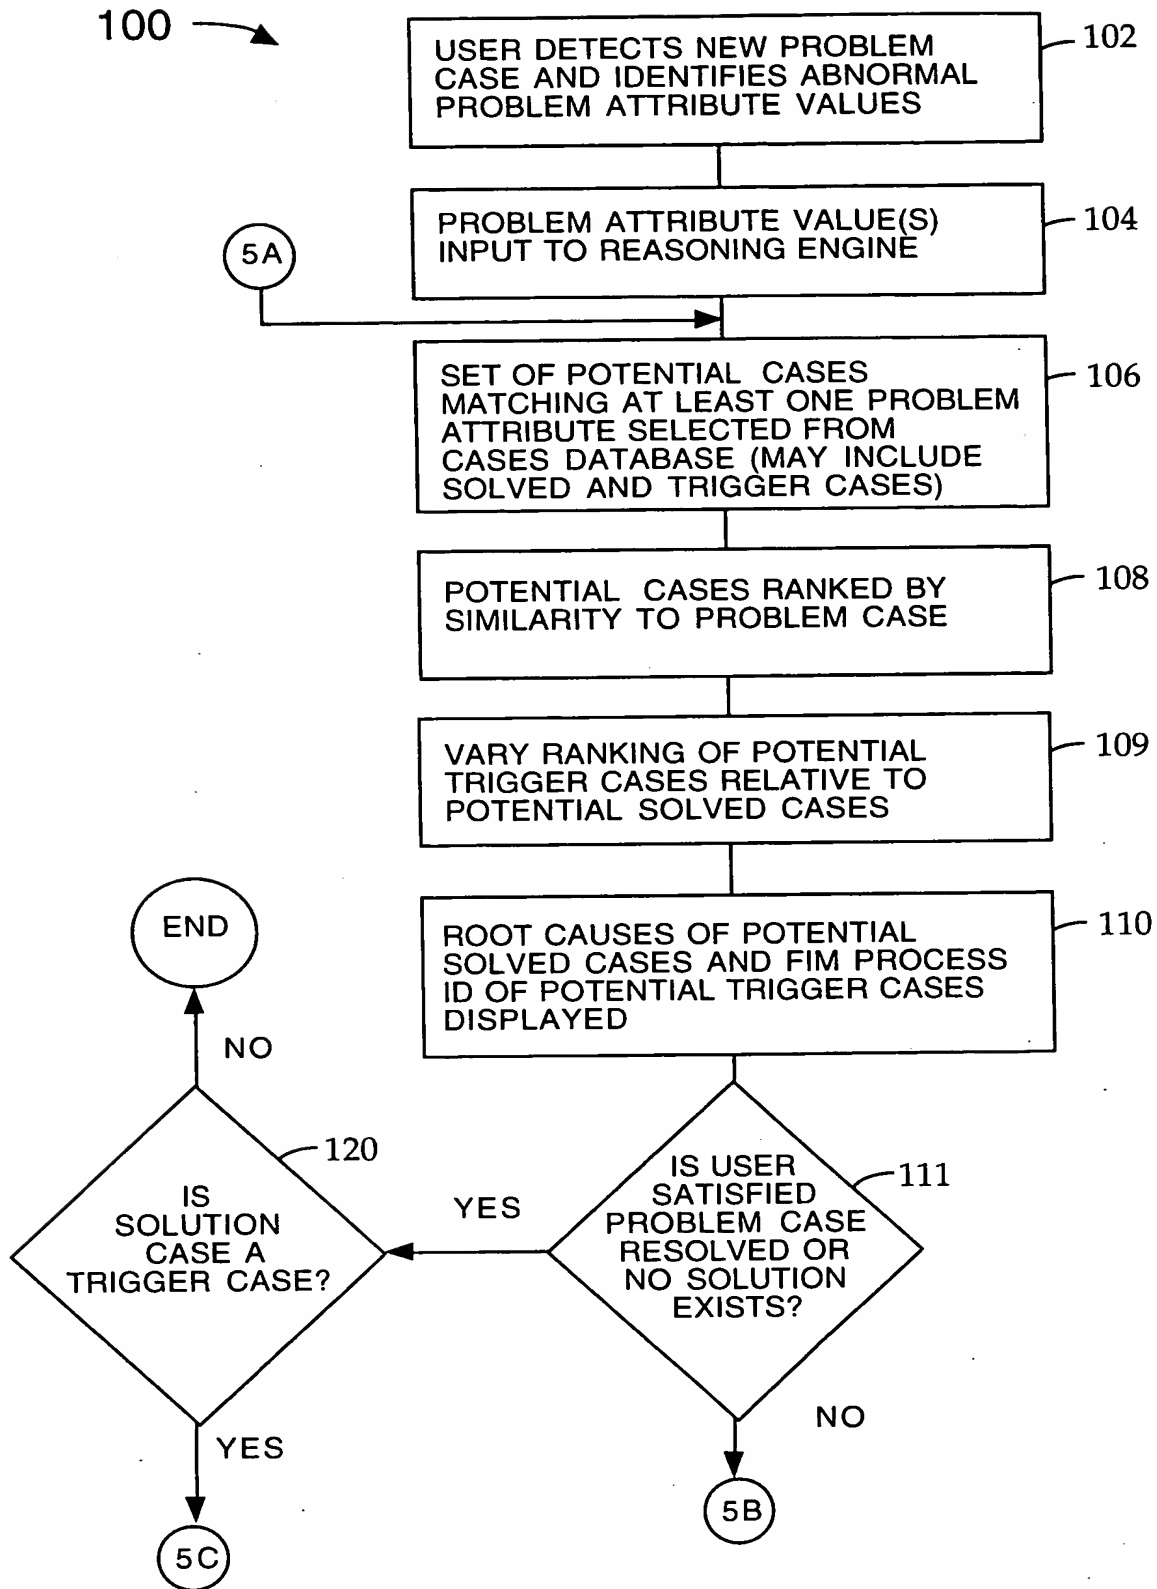


Fig. 5A



100 →

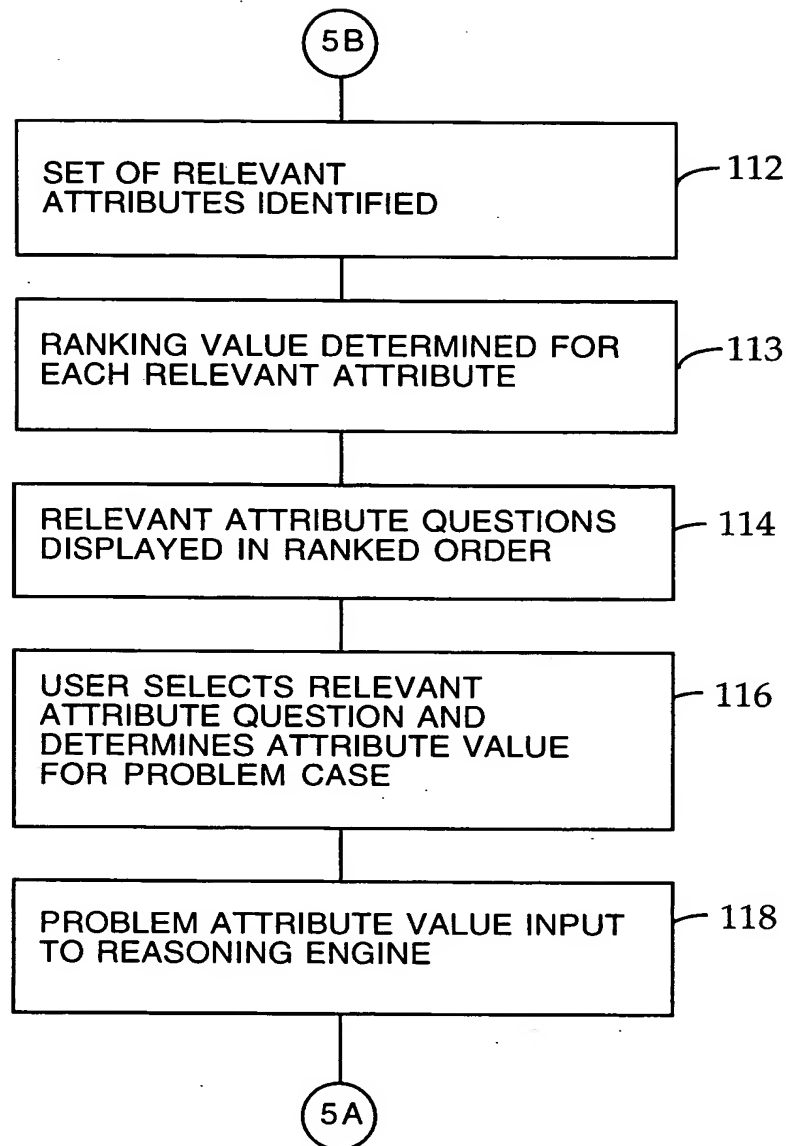


Fig. 5B

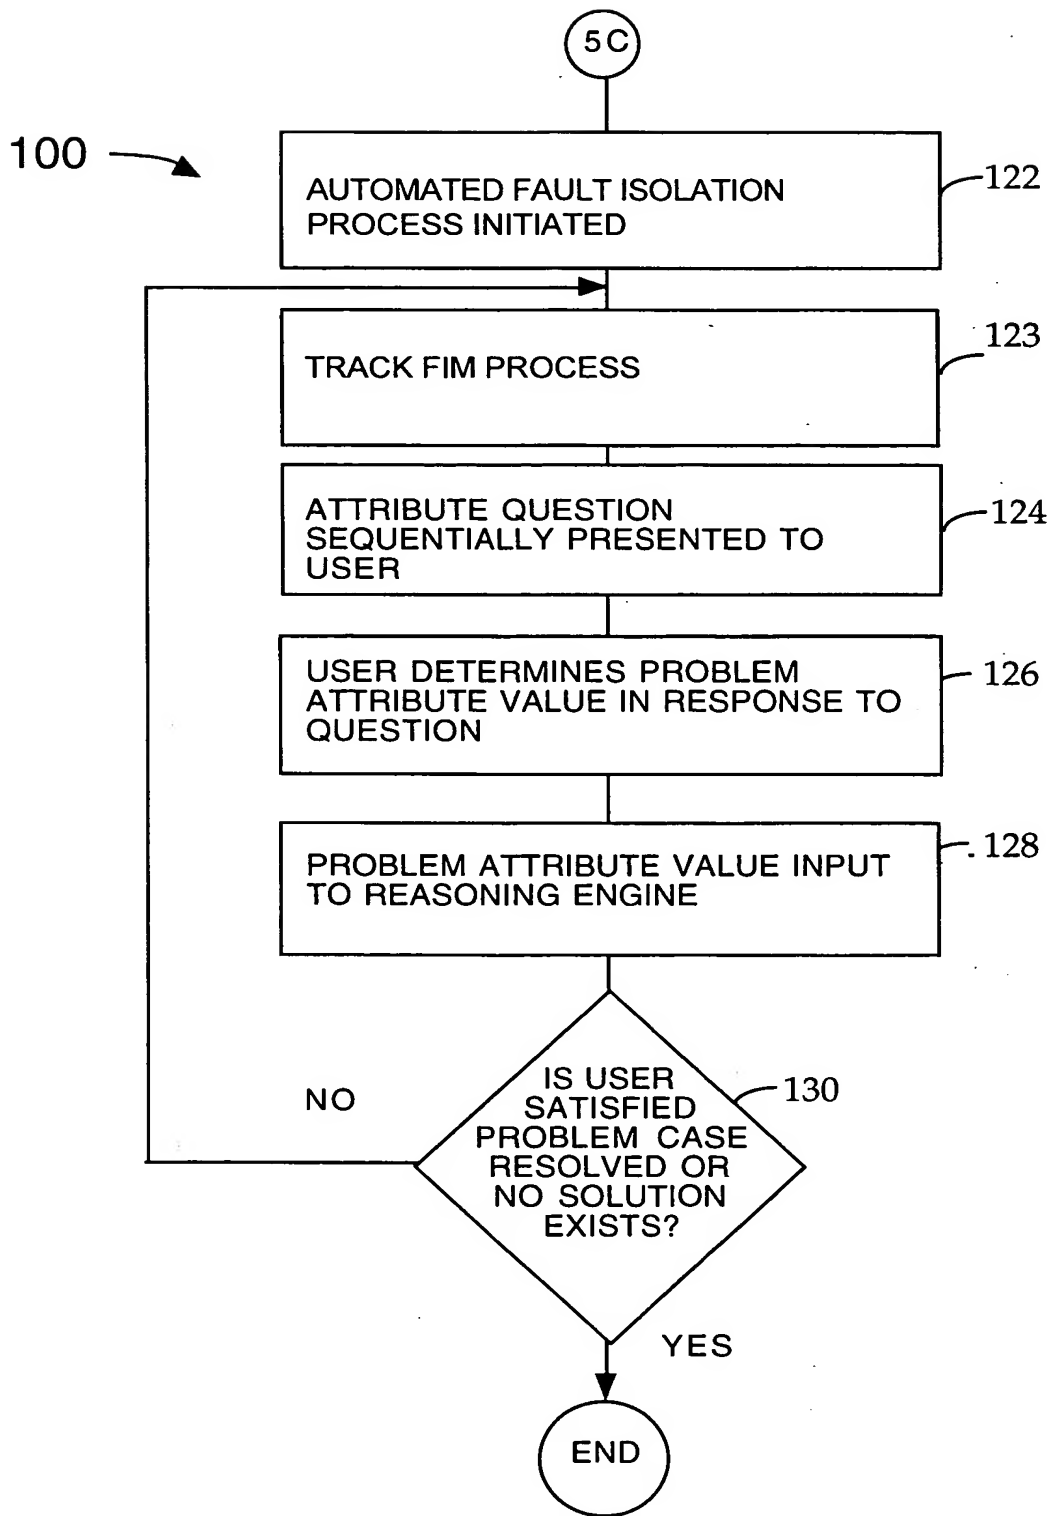


Fig. 5C